



Pushbutton Guard for Models 46 and 48 Switch with Extended Pushbutton

Part Number 15070 Pushbutton Guard is designed for use with extended pushbutton switches, Models 46 and 48. The transparent guard must be lifted to allow actuating the switch, thereby preventing accidental switching.

When mounting guard at time of switch installation position guard over panel opening and insert switch assembly. Hinge is positioned at top of pushbutton when viewed from front panel. Install mounting sleeve from back of panel. Insert tension screw and tighten. See Drawing No. 1.

If guard is to be mounted on previously installed switch, first remove pushbutton by moving push-

button removal latch to the right disengaging pushbutton and lift out. Loosen or remove tension screw on back of switch assembly to allow switch to be raised enough to clear guard frame thickness. Place guard with hinge behind the pushbutton release latch, and with guard frame under switch flange and slide into place. Retighten tension screw. See Drawing No. 2.

If installing pushbutton guard on switch adjacent to other switches it will be necessary to lift the switch high enough to allow guard to clear the adjacent switches.

Note: Tighten tension screw to 8 inch ounces max.

